

Unbreakable® Walking-Stick Umbrella




Fabric-Replacement Kit for Premium Models




1. Remove the screw holding the plastic cap at the top of the canopy, and pull that cap off the main rod.



2. With the umbrella folded, pull the steel tips off the rib ends.

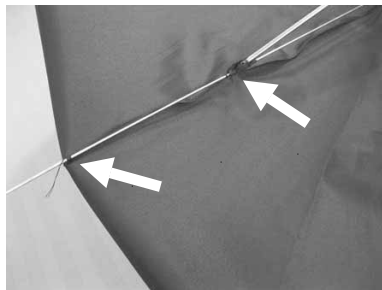



3. Open the umbrella, and cut the two sets of threads that attach the fabric to the ribs.

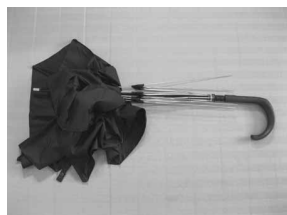

4. Fold the umbrella and take off the old fabric. Note that the round piece of nylon and the round piece of fabric that sit atop the upper nest should remain there.




5. With the umbrella folded, put on the new fabric, lining up the seams with the ribs.

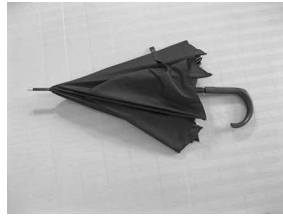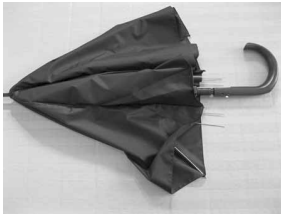


6. Affix the steel tips to the ends of the ribs. If the ends of the ribs do not fit well into the steel tips, lightly file those ends.



7. Slowly open the umbrella to make sure you didn't mix up any tips and ribs. The ribs will be bent as shown in the photo. This is normal. If you are in a hurry, you may jump directly to point 9.

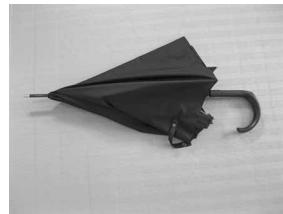

8. Fold the umbrella and leave it for a day or two, so the fabric will have time to stretch and the ribs will be less bent. This will make sewing the seams of the fabric to the ribs easier.

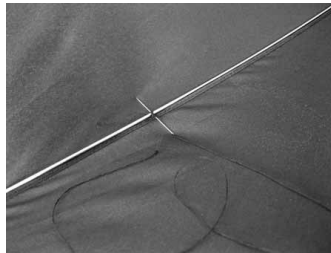

9. With a needle and thread, attach each seam of the canopy to its rib. Do not puncture the surface of the fabric; thread the needle only through the double-folded seam between the fabric wedges.



10. Put the plastic cap on top of the canopy, and affix it with the screw.



11. You have done it!